

3.Oprated Instrucation

- Step 1: Please make composition of complete machine as following drawing.
Step 2: Please open PIN,put oil into the tank,then close it.
Step 3: Put the bend into rubber bushing in order to avoiding oil spray out.
Step 4: Press handle up and down for several times until exhausting air in the hose then it should be work normally.



Remark: Please refer to hand oil lubricator exploded view on page 2.

HAND OPERATED OIL PUMP


Instruction



1.Specification

Suitable for	05~90#oil
Outlet flow	75cc/cycle
Output Pressure	<16Mpa
Drum application	25L
Net weight	10kg

2.Part List

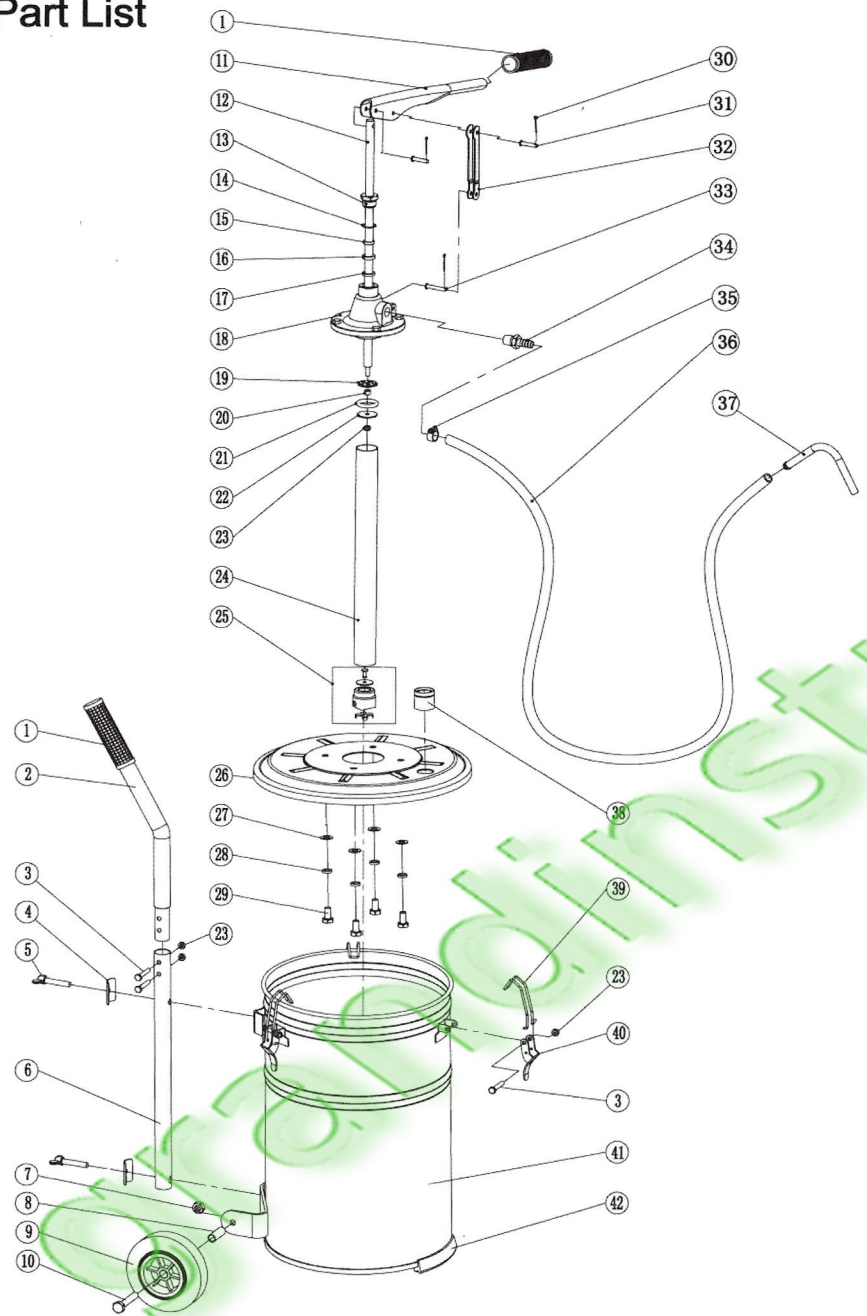

No.	Description of parts	Qty.	No.	Description of parts	Qty.
1	handle bushing	2	25	oil-inlet	6
2	handle	1	26	cover	1
3	screw	5	27	gasket	4
4	u pad	2	28	pad	4
5	screw	2	29	screw	4
6	connector	1	30	pin	3
7	nut	2	31	hinge pin 1	2
8	bushing	2	32	connecting pole	1
9	wheel	2	33	hinge pin 2	1
10	handle	2	34	oil-outlet	1
11	handle bushing	1	35	locking escape	1
12	suction pole	1	36	hose	1
13	nut	1	37	bend	1
14	o ring 1	3	38	rubber bushing	1
15	sed ring 1	1	39	spring	3
16	sed ring 2	1	40	trigger	3
17	plastic pad	1	41	tank	1
18	pump head	1	42	rubber pad	1
19	board	1			
20	pad	1			
21	o ring 2	1			
22	suction board	1			
23	nut	1			
24	suction tube	1			